


SAFETY FIRST

ALWAYS KEEP THE GUN POINTED IN A SAFE DIRECTION
ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL READY TO SHOOT
ALWAYS KEEP THE GUN UNLOADED UNTIL READY TO USE

CELERITAS™ GLOCK MAG RELEASE PRODUCT MANUAL

PARTS LIST

1 MAG RELEASE | x 1

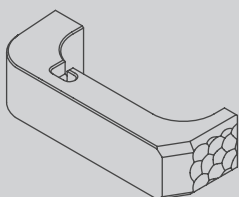

REQUIRED TOOLS



FLATHEAD SCREWDRIVER



NEEDLE-NOSE PLIERS

MAJOR FEATURES

- Reversible mag release for Gen 4 and Gen 5 small frame Glocks
- CNC machined from single 7075-T651 aluminium billets
- Hardcoat anodizing / MIL-A-8625 Type III

INSTALLATION INSTRUCTIONS

1. Conduct a safety check then remove the magazine and the slide from the frame (FIG.A).
2. Use a small flathead screwdriver to push the mag catch spring out from its position in the mag release (FIG.B) then use pliers to pull it upward and out of the receiver (FIG.C).
3. Slide the mag release out and slide Celeritas™ in (FIG.D).
4. Reposition the mag catch spring into its original position, make sure to seat it completely.
5. Use the screwdriver to push the end of the magazine catch spring into the designated slot in Celeritas™.
6. Insert an empty magazine into the frame and press the magazine release to confirm that it operates correctly.

FIGURE A

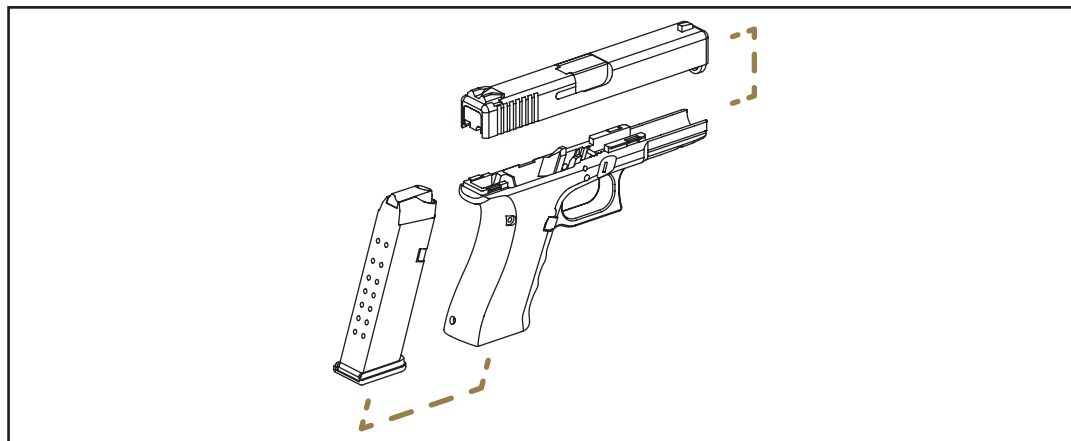


FIGURE B

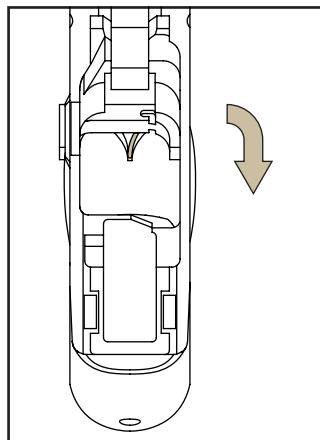


FIGURE C


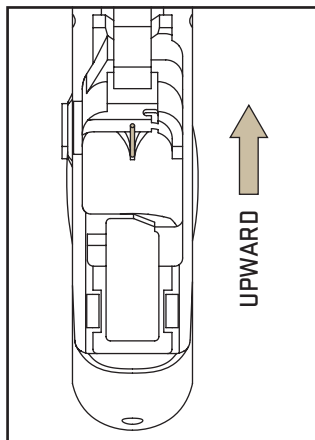


FIGURE D

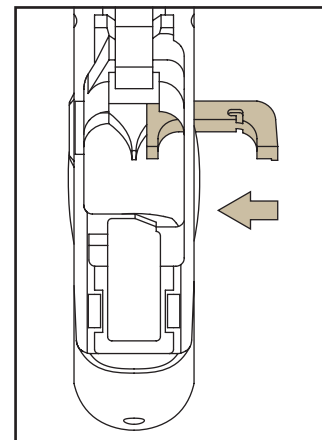

AUDERE SRL

CONTACTS

THANKS FOR YOUR PURCHASE

STRADA DEGLI ANGARIARI, 25
47891 ROVERETA - RSM

TEL +378.0549.963180
MAIL info@audere.sm

VISIT US AT
WWW.AUDERE.SM



MADE IN ITALY

